
PNM METER STANDARD

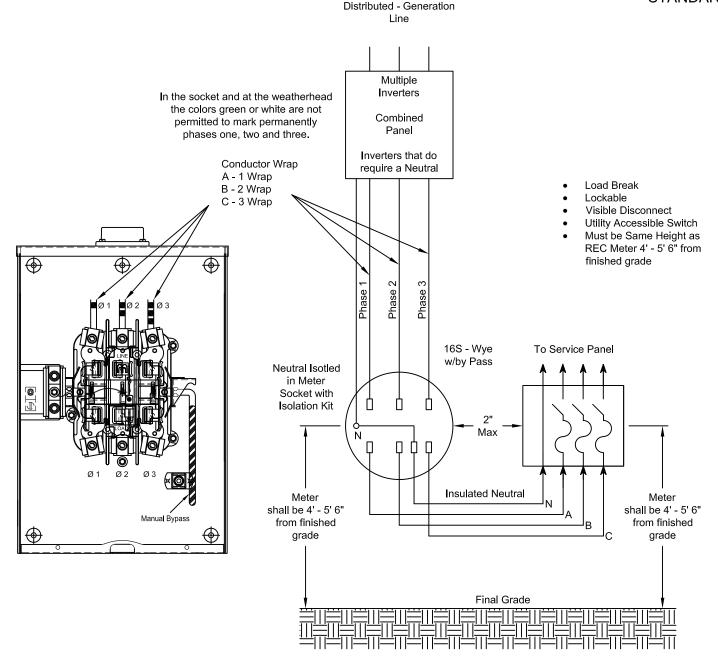

NOTES

- Check with your new service representative if you have special voltage requirements.
- (2) To remove the meter first open Customer-Generation Disconnect and then remove the meter.
- (3) If supply side connection, Customer Generation Disconnect must be service entrance rated.
- (4) Must have three phase outputs.
- (5) Metering and instrument cabinets shall not be used to house Customer-owned equipment, such as distribution panels or other equipment, nor used as a junction box/trough for the distribution of circuits.
- (6) Fused disconnect must be used for systems 50kW and larger.
- (7) Meter shall be 4' 5' 6" from finished grade.

Approved Equipment		
Manufacturer	Item	Mfg Part#
Durham Durham Landis & Gyr Landis & Gyr Milbank	200A OH Socket 200A OH/UG Socket 200A OH Socket 200A UG Socket 200A OH/UG Socket	UT-H7203B UT-H7213 HQ7-400701F HQ7U-400701F NU9701-RXL

For ease of checking service without interruption, PNM will no longer allow ring meter sockets as of 12/01/2013.