


Grounding/Bonding & Meter Socket

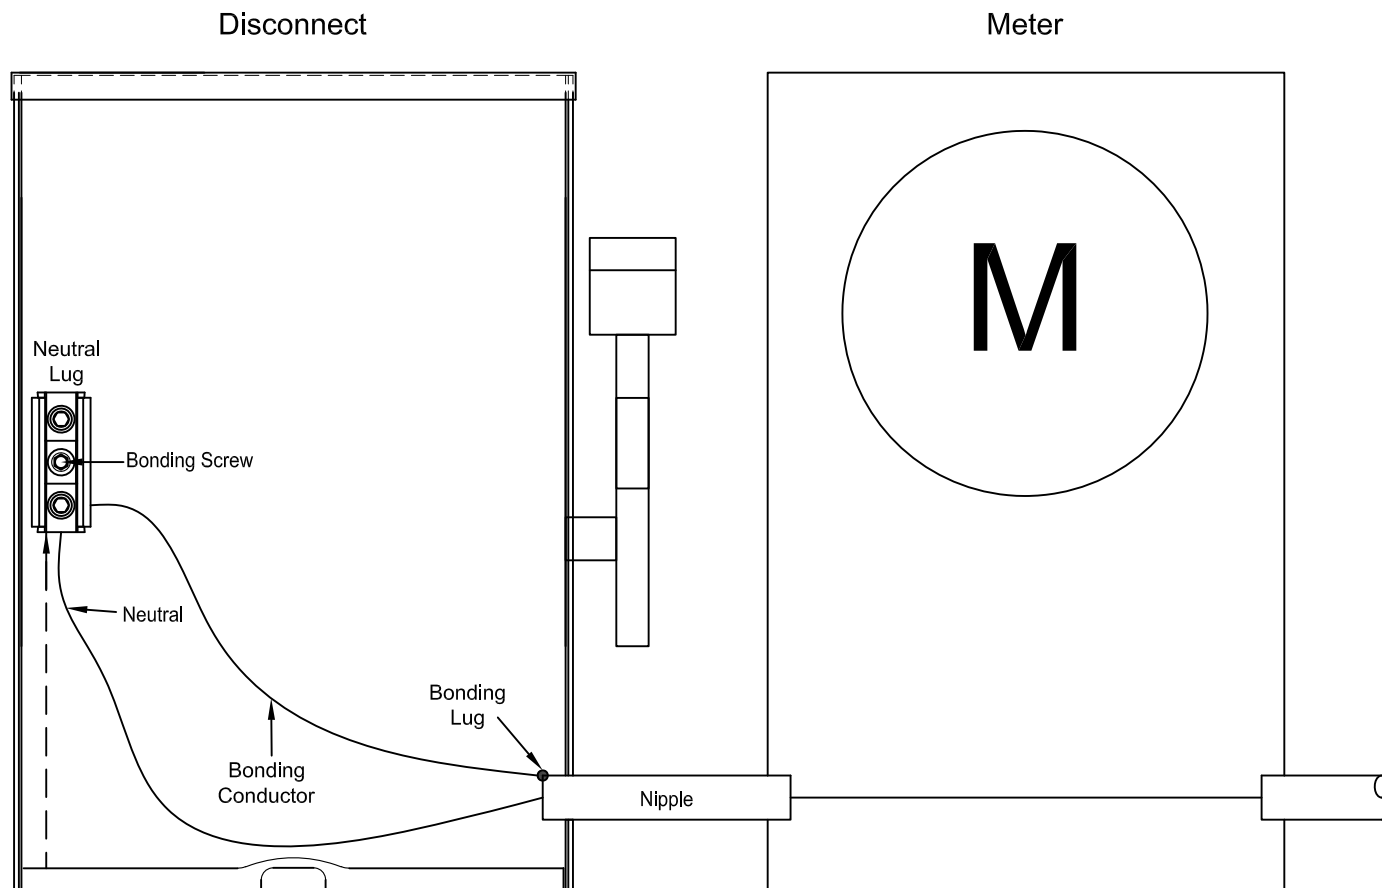

* If nipple is PVC, no bonding lug required.

REC Bonding - Since PNM put the isolation switch ahead of the REC Meter Bonding is done at the Isolation Switch if needed, no the socket

NOTES

- (1) In some cases such as switchgear, meter packs, pedestals, temp services, etc. the drawings may not apply due to how things are manufactured. These would fit for most single meter, self-contained services.