


See DS-2-16.5  
for Alley Arm  
Construction

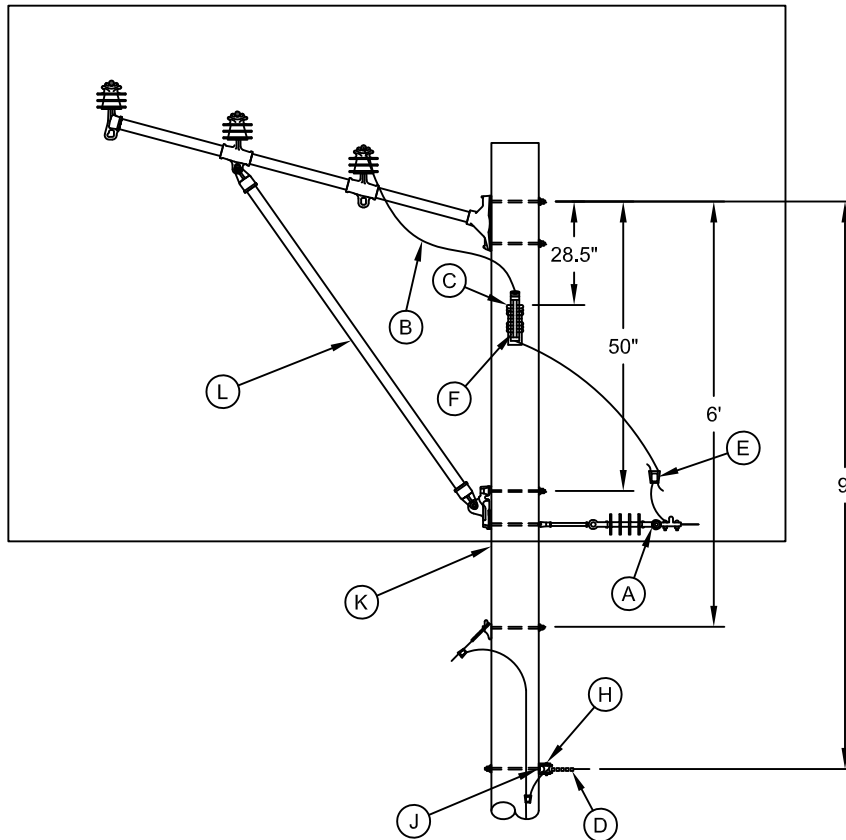

NOTES

- (1) The #4 CU solid 600V covered wire must be treated as an energized bare wire.

REFERENCES

- (1) See DS-2-16.5 Three-Phase Alley Arm with Brace
- (2) See DS-5-3.\_ Down Guy Assembly
- (3) See DS-5-5.0 8" Anchor Assembly
- (4) See DS-6-1.0 Alley Arm with Brace
- (5) See DS-18-20.0 Ground Assembly
- (6) See Section 18 for Individual Details

Material List

Item	Quan.	Description	Stock #
A	1	Deadend Assembly with Extension Link	DS-18-13.0
B	1	#4 CU Solid 600V Covered Wire	0000-001150
C	1	15 kV Cutout	5925-230921
D	1	Deadend Grip	5975-
E	1	Line Tap	DS-18-99.0
F	1	Fuse Link	5920-
G	1	Fuse Tag	9999-001986
H	1	One Wire Rack	DS-18-18.0
I	3	Line Ties	5975-
J	1	Spool Line Tie	5975-
K	1	Wood Pole	DM-17-1.0
L	1	Alley Arm with Brace	0100-005843

Three-Phase with Single-Phase Take-off with Alley Arm

DS-2-13.1