



DISTRIBUTION STANDARD PNM

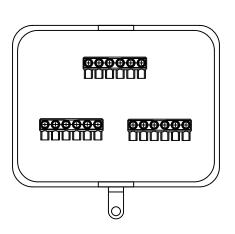

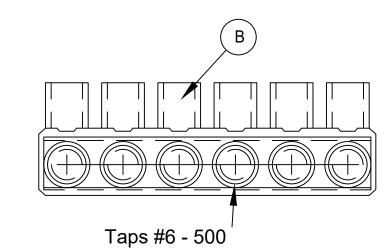

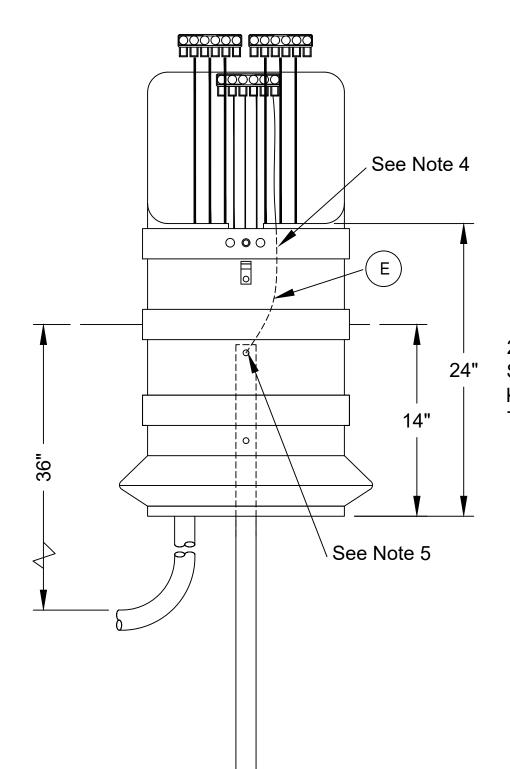

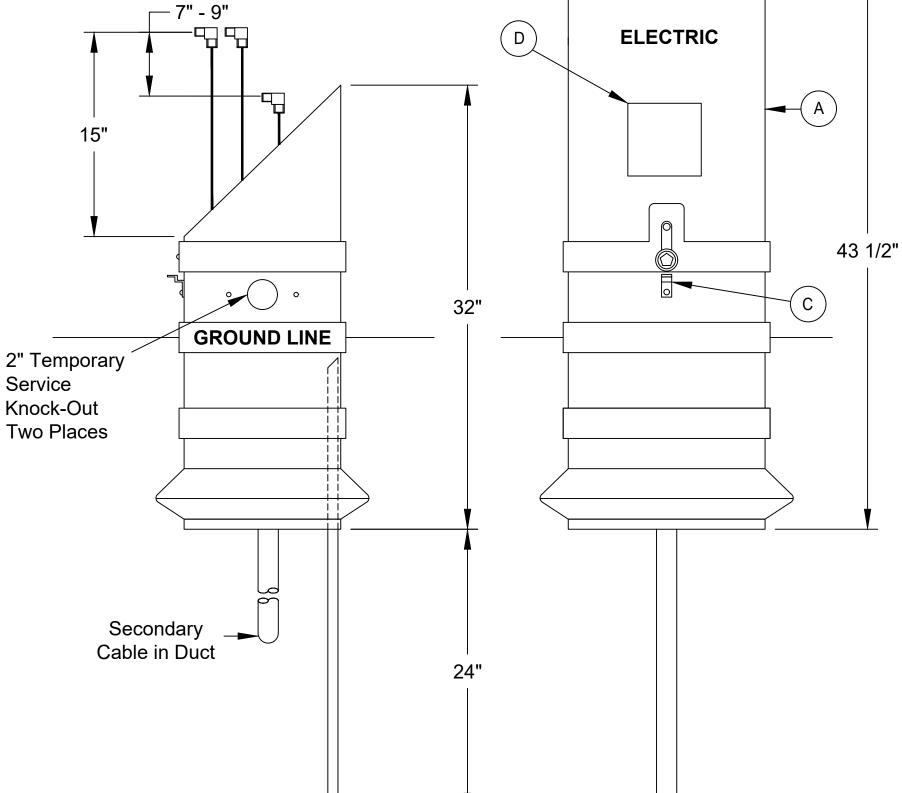


NOTES

- (1) Plug all empty ducts.
- (2) Mark all circuit to show location of the other terminal.
- (3) Working clearance is 4' in front of the doors and 1' from the sides.
- (4) Bonding to metal stake required for effective grounding.
- (5) Internal bolt to be screwed in from inside-out. Creates effective connection location for Damage Prevention Spotters.

REFERENCES

(1) See DS-18-26.0 Overhead and Underground Torque Values

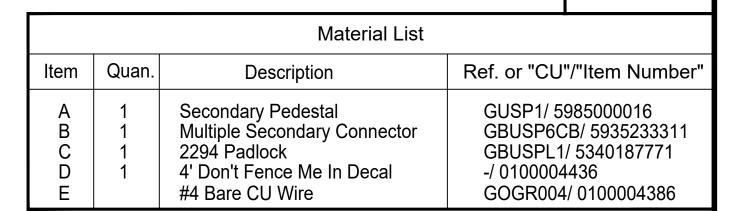



DS-10-12.0 Page 1 03/01/25 E