


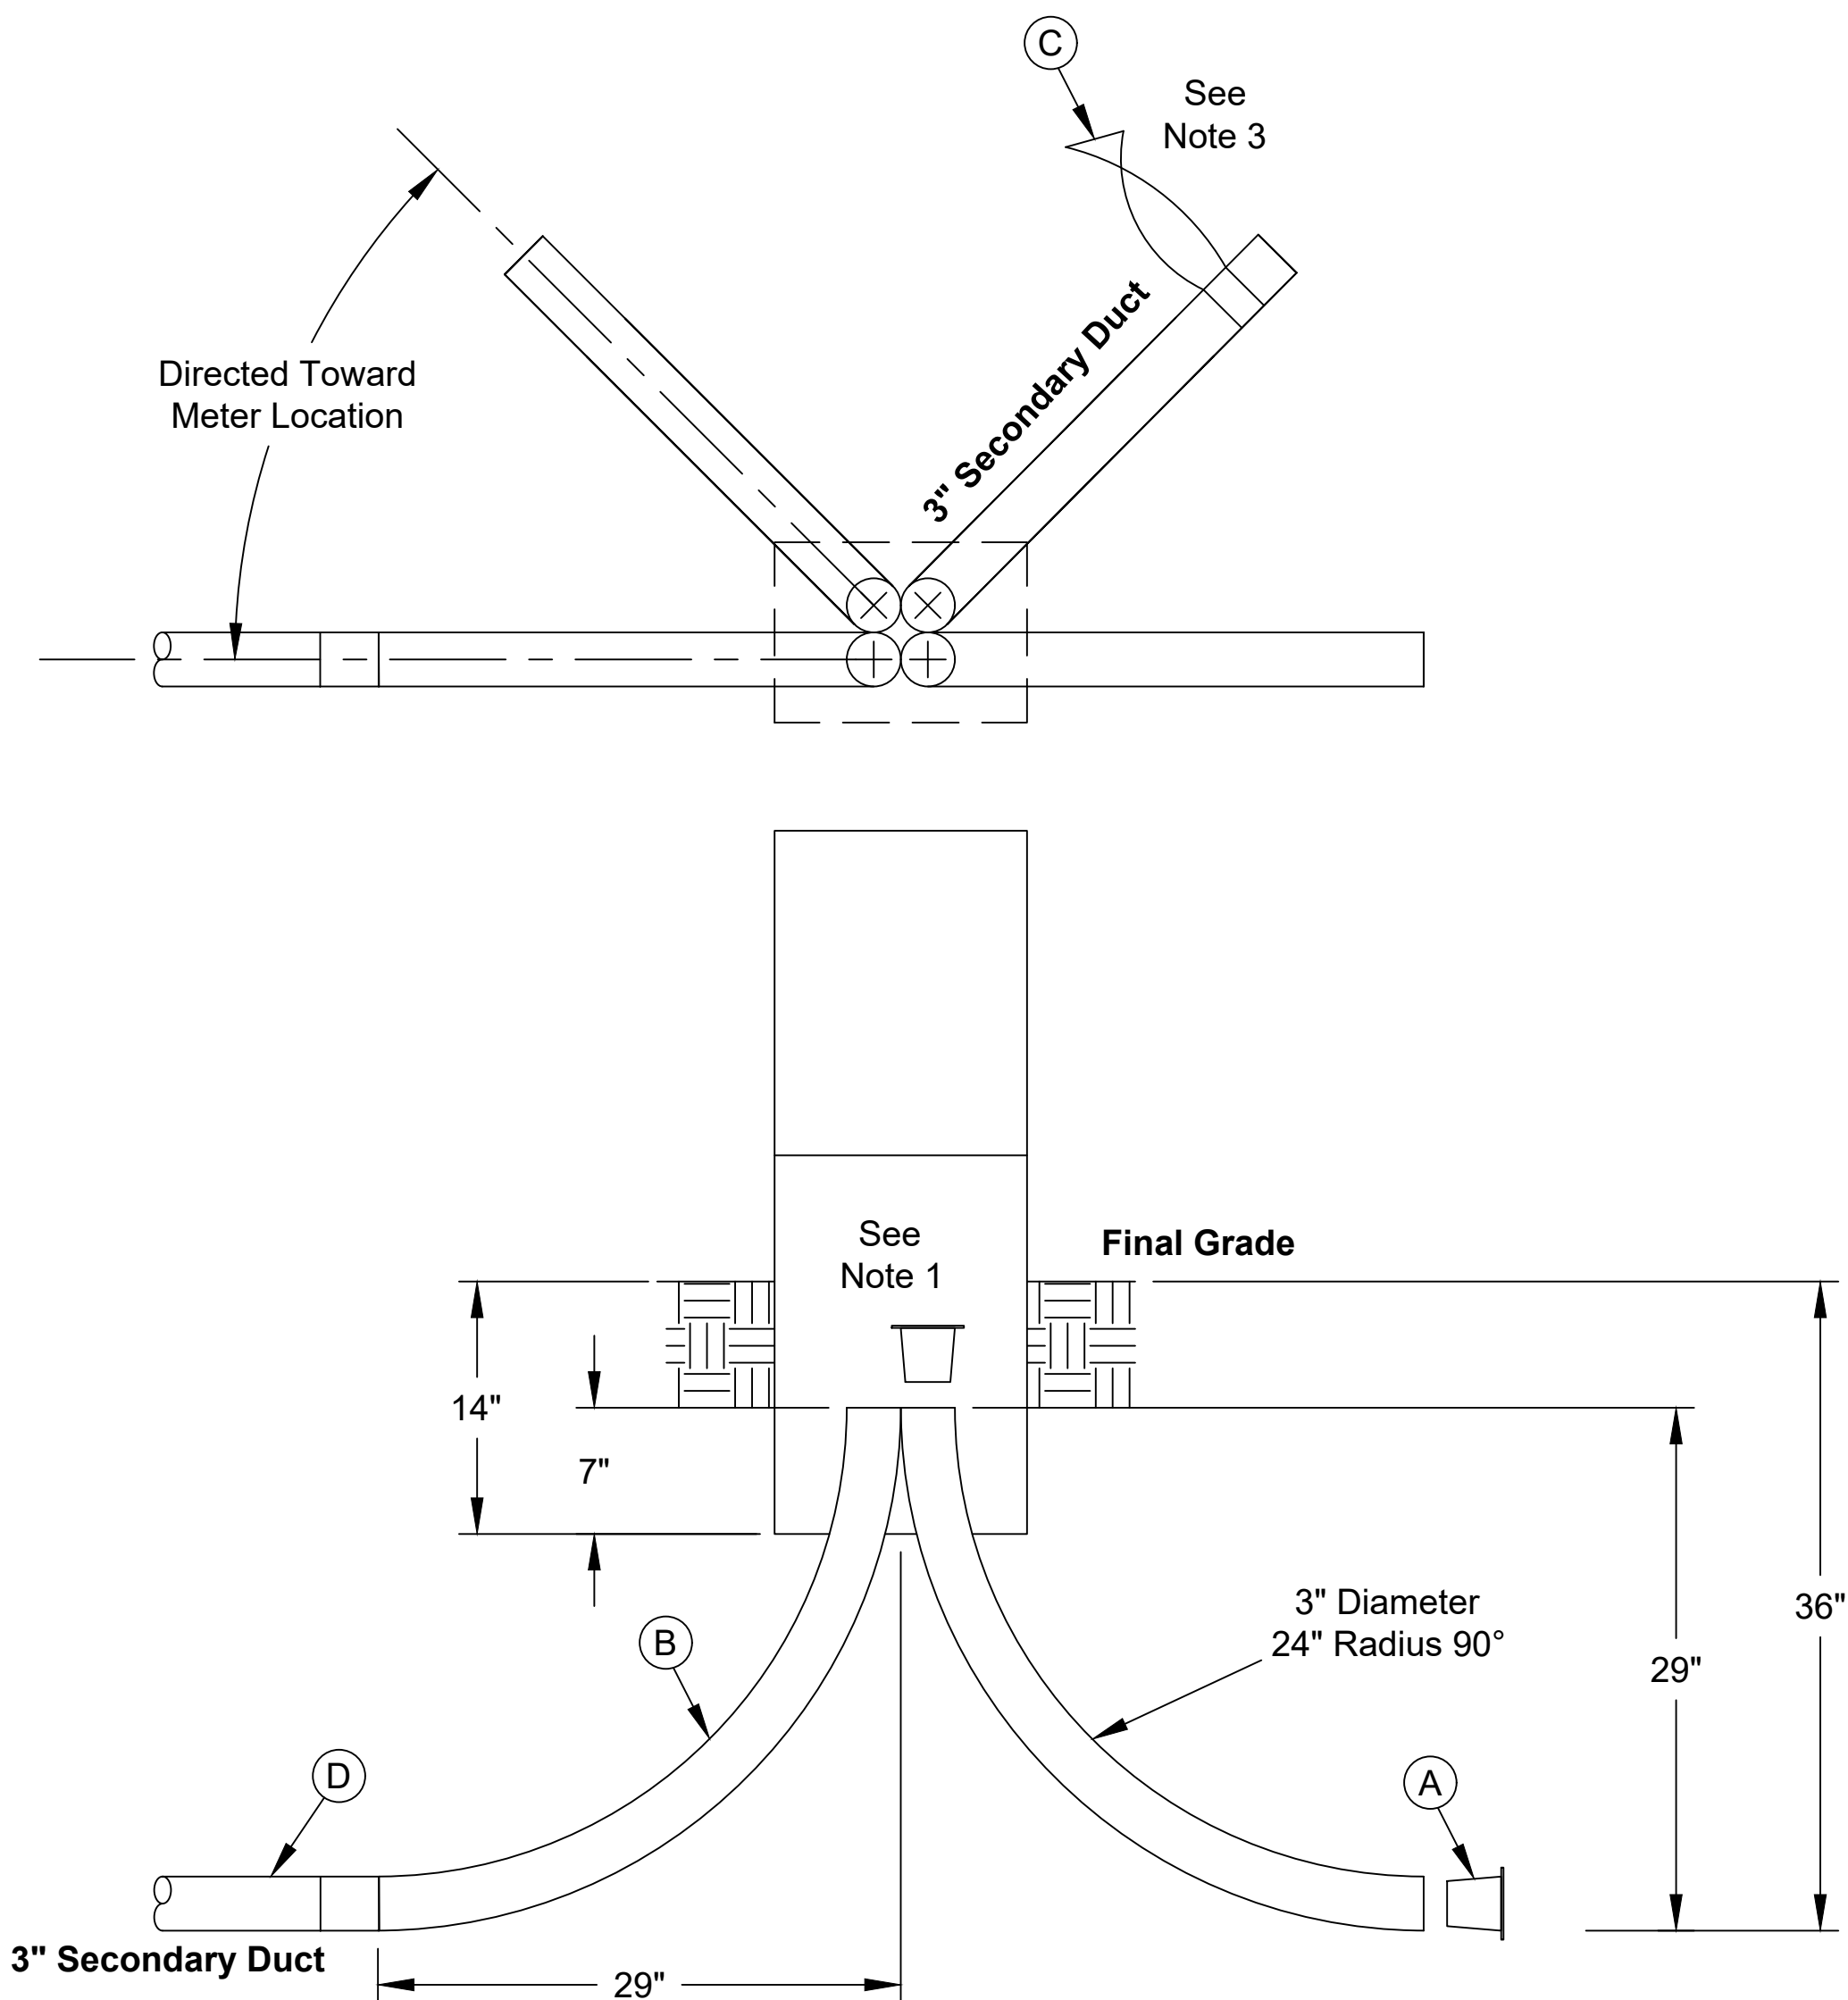

NOTES

- (1) Install a poly duct plug to both ends to keep out dirt.
- (2) Working clearance is 4' in front of the doors and 1' from the sides.
- (3) To identify duct entrance locations a white vertical tape shall be tied to the end of the stub and brought above the finish ground line.
- (4) PNM requires that all secondary and service cables be in duct. Include stubouts where future services can be expected. Contact your new service representative for assistance.

REFERENCES

- (1) See DS-10-12.0 Secondary Pedestal
- (2) See DS-18-26.0 Overhead and Underground Torque Values



Material List			
Item	Quan.	Description	Ref. or "CU"/"Item Number"
A		3" Conduit Plug	GBUCP4/ 0100005699
B		3" Diameter, 24" Radius 90° PVC Elbow	GBUCE03/ 7000462815
C		1 1/2" White Tape	-/ 0000005626
D		3" x 10' Schedule 40 PVC Duct	GUCO24/ 7000460560