


Grounding/Bonding & Meter Socket

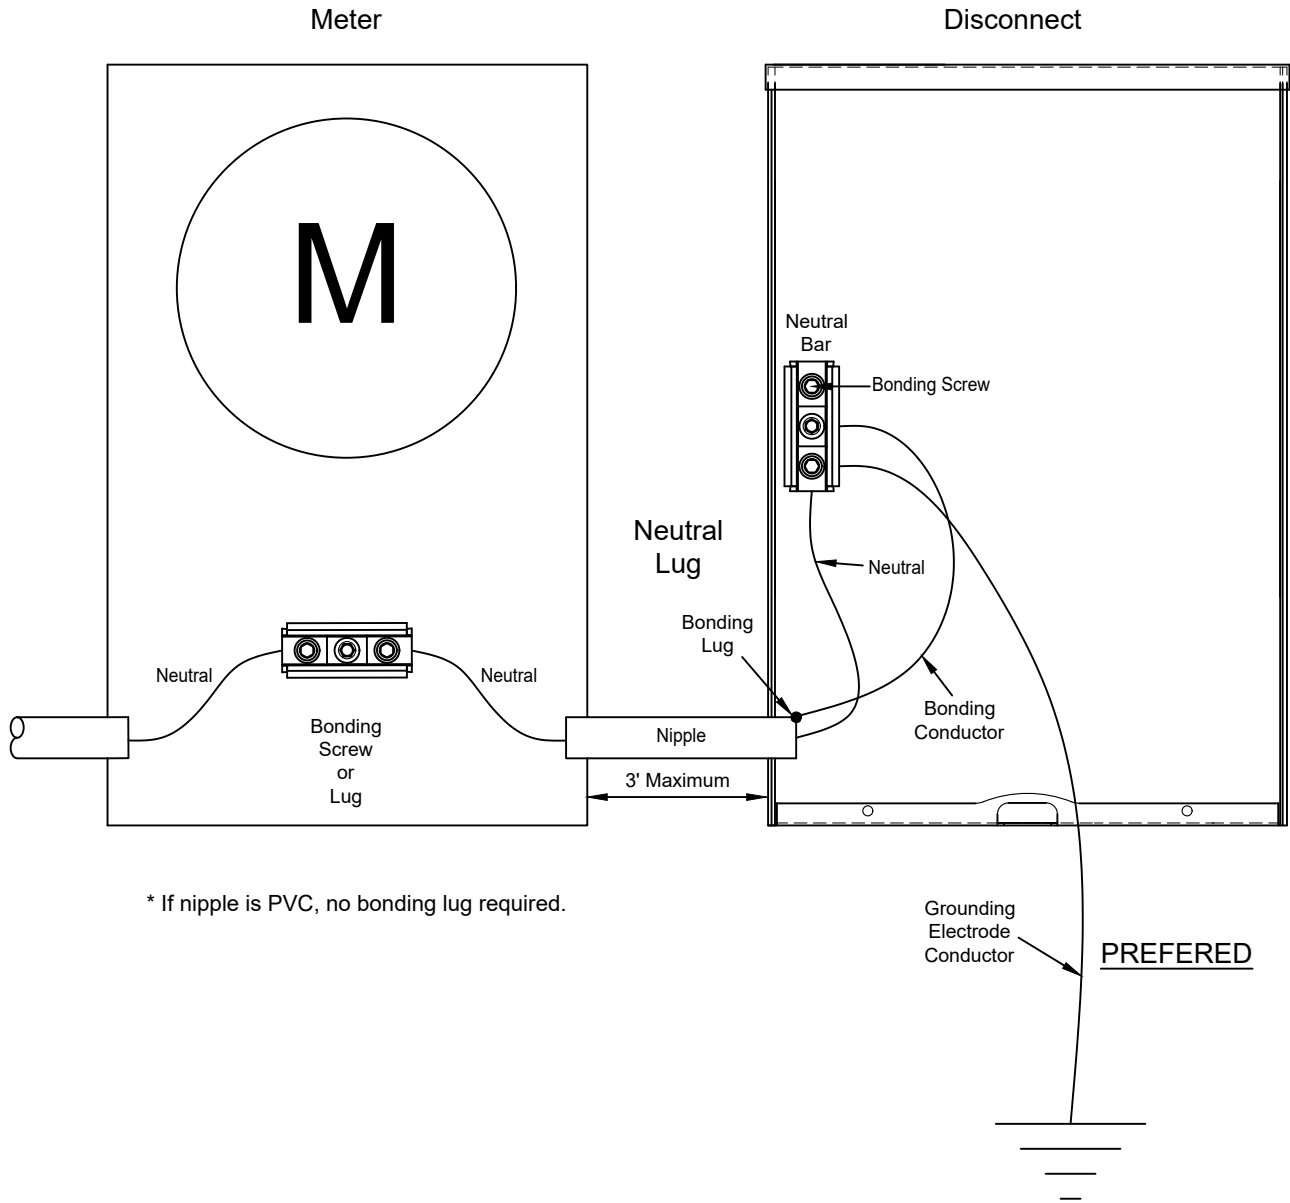

* If nipple is PVC, no bonding lug required.

NOTES

- (1) In some cases such as switchgear, meter packs, pedestals, temp services, etc. the drawings may not apply due to how things are manufactured. These would fit for most single meter, self-contained services.
- (2) Above 200A, refer to MS section 8.
- (3) For I.T.T. Transformers refer to MS section 3.

Up to 200A 3-Phase, 320A 1-Phase or Under

MS-1-27.0